

Ultimate Z
 1541 Burgundy Parkway
 Streamwood IL 60107 US
 Chris@UltimateZ.com www.UltimateZ.com
 Phone: 630-837-0700 / Fax: 630-837-4919



Date: 6/05/2006
 Customer #: K4170
 Sales ID#: WEB

Invoice #: 00510412

Sold To
 Jason Knott
 965 S 4th
 Kankakee IL 60901

Ship To
 Jason Knott
 965 S 4th
 Kankakee IL 60901

k3smostwanted@comcast.net

It #	Stock #	Quantity	List	Description	Price	Amount
1	MISC	1		rebuild engine cust dropped off cust owes head je pistons install engine we have along with new harness		
2	MISC	1		Deposit of \$2500.00		
3	LABOR	1		disassemble engine and check out	180.00	
4	LABOR	1		replace freeze plugs	45.00	
5	LABOR	1		bore and hone block with deck plate	260.00	
6	LABOR	1		ballance lower end with JE pistons	260.00	
7	LABOR	1		r&r pistons	100.00	
8	LABOR	1		polish crank	80.00	
9	LABOR	1		final clean engine	70.00	
10	LABOR	1		gap rings	90.00	
11	LABOR	1		pin fit rods	80.00	
12	LABOR	1		assemble short block	580.00	
13	LABOR	1		pres test heads	90.00	
14	LABOR	1		5 angle valve job	375.00	
15	MISC	1		JE pistons wire locks and ring set	850.00	850.00
16	MISC	1		JE ring set	128.00	128.00
17	MISC	1		Freeze plug set	15.98	15.98
18	MISC	1		Eagle rod set NO CHARGE		
19	12207-30P22	2	\$18.80	Bearing, crankshaft main, #2 & #3, grade 2 20% Discount	15.04	30.08
20	12207-F6502	1	\$10.44	Bearing, crankshaft main, #1, grade 2 20% Discount	8.35	8.35
21	12263-F6503	1	\$18.52	Bearing, crankshaft main, #4, grade 3 20% Discount	14.82	14.82

ALL RETURNS ARE SUBJECT TO A %20 RESTOCKING FEE & NO REFUNDS ON SHIPPING

Ultimate Z
 1541 Burgundy Parkway
 Streamwood IL 60107 US
 Chris@UltimateZ.com www.UltimateZ.com
 Phone: 630-837-0700 / Fax: 630-837-4919



Date: 6/05/2006
 Customer #: K4170
 Sales ID#: WEB

Invoice #: 00510412

Sold To
 Jason Knott
 965 S 4th
 Kankakee IL 60901

Ship To
 Jason Knott
 965 S 4th
 Kankakee IL 60901

k3smostwanted@comcast.net

It #	Stock #	Quantity	List	Description	Price	Amount
22	12111-31P01	12	3.86	Rod bearing, grade 1 20% Discount	3.09	37.06
23	10101-40P86	1	\$318.41	Gasket, engine gasket repair kit, Z32TT 20% Discount	254.73	254.73
24	15010-40P01	1	204.90	Oil pump assy, Z32TT 20% Discount	163.92	163.92
25	LABOR	15		assemble and install engine	90.00	
26	14055-F6511	2	3.98	Hose, bypass, Z32 20% Discount	3.18	6.37
27	B4011-31P71	1	367.84	Harness assy, EFI, Z32TT 20% Discount	285.45	285.45
28	USED	1		Misc parts for trans and engine conversion	150.00	150.00

SubTotal: \$1,944.75

Labor: 3,560.00

Shipping: 22.00

State Tax: 8.75% 170.17

Total: \$5,696.91

Paid:

ALL RETURNS ARE SUBJECT TO A %20 RESTOCKING FEE & NO REFUNDS ON SHIPPING

Total Due: \$5,696.91

*** SAVE FOR FORDRECTIONS ***

*** JOB# ** 553732 ***

JE PISTONS

DATE 06/07/06

15312 CONNECTOR LANE

HUNTINGTON BEACH, CA. 92649

(714)898-9763

JE SHELF PO #

ACC # 2539

15312 CONNECTOR LN

HUNTINGTON BEACH CA 92649

PISTON PART # 165053 quantity

MOTOR TYPE DATSUN/NISSAN VG 30 V6

HEAD DESC. NISSAN V6 4V

DISPLACEMENT

PISTON TYPE DISH-Flat Bot

BORE 3.445 (87.50mm)

STROKE

ROD LENGTH

DISH DEPTH .040 (1.02mm)

COMP. DIST 1.255 (31.88mm)

Int .100 (2.54mm) 23 Deg

Exh .100 (2.54mm) 23 Deg

Valve Pocket depth measured from Deck

IMPORTANT
CLEARANCE INFORMATION
GUIDELINES ONLY

Set Clearance to .0035 (.09mm)
Some applications may require more
clearance. Measure piston diameter
.500(13mm) up from bottom of skirt

CORRECT PISTON INSTALLATION IS THE
RESPONSIBILITY OF THE CUSTOMER


	Groove		Land	
TOP	.060	(1.52mm)	.255	(6.48mm)
2ND	.060	(1.52mm)	.155	(3.94mm)
OIL	.111	(2.82mm)	.085	(2.16mm)

PIN DIA .866 (22.00mm)

PIN LENGTH 2.500 (63.50mm)

JE .063 Wire Locks

TARGET WEIGHT 348 GRAMS .500(13mm)

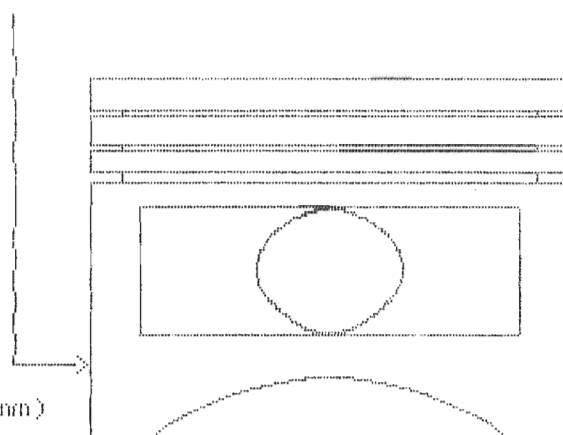

ALL SPECIFICATIONS ARE SUBJECT
TO MANUFACTURERS TOLERANCES

JOB NO.: _____ DATE: _____
CUSTOMER NAME: UCT 2 / NO CAR PHONE: _____
ADDRESS: _____
CITY: _____ STATE: _____ ENGINE TYPE: 3.0 nissan
CRANKSHAFT TYPE: _____ STROKE: _____
NOTES: _____

- BOB WEIGHT INFORMATION -

PISTON 348.0

PIN + 109.0

LOCKS + 2.0

RINGS + 26.0

INSERT 32.0

ROD(SMALL END) + 187.0

ROD(BIG END) + 421.0

TOTAL = 672.0

PISTONS/THROW x 1

RODS/THROW x 1

RECIPROCATING WEIGHT = 672.0

OIL + 4.0

BALANCE FACTOR x 50.0

RECIPROCATING WEIGHT = 336.0

ROTATING WEIGHT = 457.0

BOB WEIGHT = 793.0



2618 INSTRUCTIONS

THESE INSTRUCTIONS COVER PISTON, PIN, LOCK AND RING INSTALLATION
PLEASE READ BEFORE INSTALLATION TO ENSURE CORRECT OPERATION AND
MAXIMUM PERFORMANCE FOR YOUR APPLICATION.



BEFORE BALANCING, installing pins, rods, or locks, please check the part number and description on box label to be sure you have the correct components. Shelf pistons that are altered, scratched or damaged are not returnable. Custom Pistons are returnable only for manufacturing defects.

Piston to cylinder wall clearance

1. Piston diameter must be measured at gauge point which, in most cases, is .500" up from the bottom of skirt. (See fig. 1).
2. Dimensions listed are gauged at a temperature of 68 degrees fahrenheit. Note: aluminum expands and contracts with temperature variations.
3. Your pistons are manufactured from 2618 low-silicon aerospace aluminum alloy.
4. Clearance is built into piston based upon finished bore for normal operating conditions. (See Table. 1).
5. Clearances listed below are minimum. Some applications such as supercharged, turbo, nitrous and endurance applications may require .001"-.003" to be added to the minimum clearances in Table 1. Cold water pickup marine applications may require an additional .002"-.004" clearance.

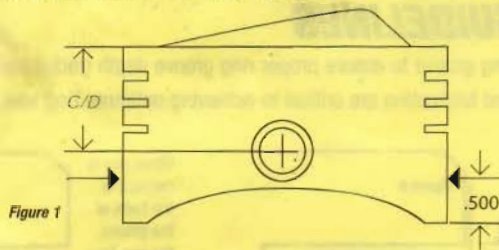


Table 1	Bore Range	Min. Clearance
Sport compact	2.500 to 3.625"	.0030 to .0035"
Sport compact	3.626 to 3.999"	.0035 to .0040"
SB applications	4.000 to 4.200"	.0035 to .0045"
BB applications	4.200 to 4.600"	.0040 to .0050"

Piston to valve clearance

Piston to valve clearance is determined by cam lift, lobe separation, duration, valve margin, head design, and aftermarket milling of cylinder head. Minimum recommended clearance for intake & exhaust valve would be 0.100" deep and .050" radially. Check by using clay or follow cam manufacturers recommendations for checking clearance, making sure the cam is degreed exactly as it will be during operation.

Cylinder/Liner/Block preparation

We strongly recommend that you chamfer or slightly relieve the bottom edges of your cylinders/liners/blocks. If a sharp edge is present it will cause excessive piston skirt wear. This is very important in stroker applications where the piston skirt travels past the bottom of the cylinder.

Piston/dome to head and spark plug clearance

Due to the large selection of aftermarket cylinder heads available, and wide variety of combustion chambers, you should always check piston/dome to head and spark plug clearance to assure proper clearance (See fig.2). Minimum clearance for steel rod = .040", aluminum = .060". Check using clay with piston installed on rod at TDC, rock piston to get minimum clearance.

Crank counterweight to piston clearance

Always check counterweight to piston clearance at BDC. Recommended minimum is .060"

Connecting rod to piston clearance

Due to the large variation in rod widths and material thickness above pin, always check for proper piston to connecting rod pin end clearance. Recommended clearance is .050" min per side and .050" min from top of rod to piston. With the piston installed on the rod, rock the piston side to side and rotate forward and backward to ensure proper clearance. (fig. 3)

Spiro locks

For installing Spiro locks, grip each end of the lock and pull apart (approx. 3/8" - 7/16"). The lock will resemble a small coil (fig.4). The lock can then be spiraled into place almost as if you were screwing them into a groove (fig. 5). When the locks are properly seated, only half of the lock will be visible above the groove. **Most** SRP pistons that require spiral locks will need 4 locks per piston, 2 at each end of the pin. **WARNING:** It is important

correct number of locks are installed in each piston or severe engine damage

WARNING: Do not over stretch spiro locks and do not reuse spiro locks!

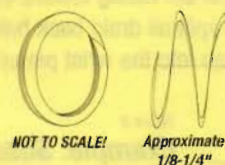
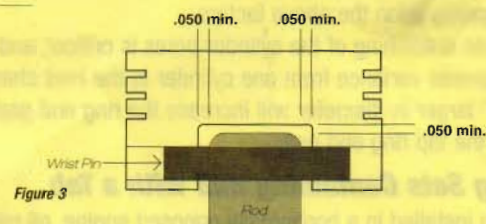
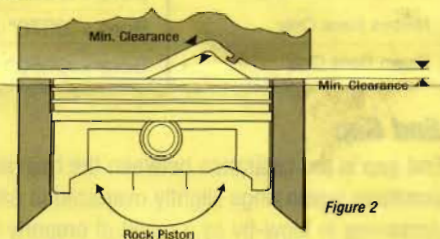


Figure 4
WARNING: Do not over-stretch spiro locks.

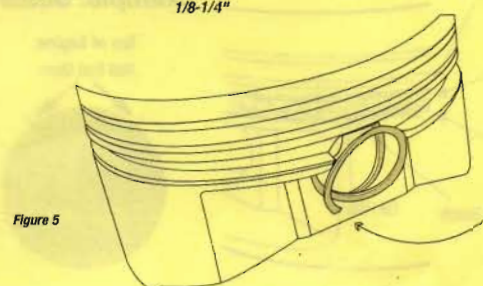


Figure 5

Wire locks

Install the end of one lock at 90 degrees from the pick lock groove. Use a stiff small bladed screwdriver and insert the tip into the pick lock groove while you wedge the lock into the groove without kinking or deforming the lock. After the first lock is in place, seat the lock by solidly hitting the wrist pin with a brass drift pin. Now install the connecting rod and the second lock. Seat the 2nd lock in the same manner as the first. Just as a precaution, we recommend hitting each side of the wrist pin with the brass drift pin an additional time. Perform these functions on a cloth towel or soft rubber pad so no damage to the piston occurs.

Cleaning


Thoroughly scrub pistons and cylinder walls with an automotive parts type cleaning solvent or hot water and soap before installation. JE recommends a light coat of assembly oil (Marvel Mystery Oil or similar) on the pistons' skirt, rings and cylinder walls for initial installation and start up. **WE DO NOT RECOMMEND USING SYNTHETIC OIL OR ANY AFTERMARKET OIL ADDITIVES** until the rings have properly seated. Be sure to thoroughly lubricate wrist pins and piston pin bores with an assembly oil to prevent galling on initial fire-up. It is also a very good idea to double check forced piston pin oiler holes for foreign matter or debris before ring installation. During trial assembly or mock-up, verify the dome and valve pockets on the pistons match the combustion chamber and valve diameters of your cylinder heads. As a rule, four-valve piston exhaust pockets are located above the JE logo on the underside of the piston. Many JE/SRP piston designs have special offset domes and /or specific valve pocket "left" or "right" hand positions. It is the responsibility of the engine builder to ensure non-symmetrical (left or right designed pistons) valve pocket pistons are installed in the correct cylinder location.

RING INSTALLATION GUIDELINES

IMPORTANT: BEFORE FILING RINGS – Check each individual ring in its corresponding piston ring groove to ensure proper ring groove depth (radial back clearance) and side clearance (thickness)(fig. 6). Proper cylinder finish (honing), ring end-gap, and lubrication are critical to achieving optimum ring seal.

Ring End Gap Table (Use as a guideline only.)

	Top Ring	2nd Ring	Oil Ring Rails
Application	Min. Gap Per Inch of Bore		Minimum Gap
High-Perf. Street-Strip	Bore x .0045"	Bore x .0050"	min .015"
Street Moderate Turbo/Nitrous	Bore x .0050"	Bore x .0055"	min .015"
Late Model Stock	Bore x .0050"	Bore x .0053"	min .015"
Circle Track / Drag Race	Bore x .0055"	Bore x .0057"	min .015"
Nitrous Race Only	Bore x .0070"	Bore x .0073"	min .015"
Blown Race Only	Bore x .0060"	Bore x .0063"	min .015"

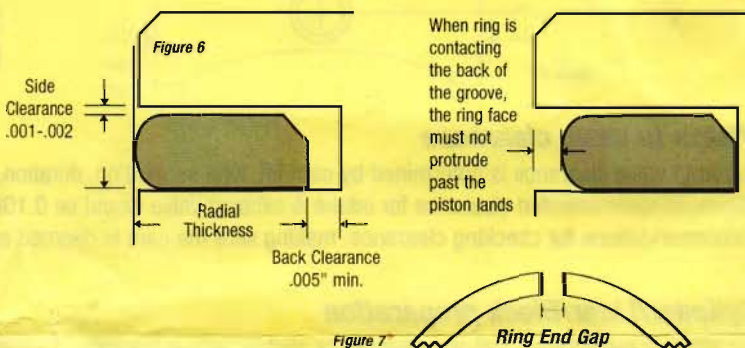

End Gap

End gap is the clearance between the two ends of a piston ring as it is installed in a cylinder (fig. 7). Most high performance and racing engine builders purchase piston rings slightly oversized in order to file fit them to very precise end gaps. Testing has shown measurable increases in horsepower and decreases in blow-by as a result of properly fitting the ring end gap to the operating conditions. Factors such as supercharging, turbocharging, nitrous oxide, endurance racing and different fuels determine proper ring end gap. Proper ring end gap can more than double from one engine to the next depending upon the above factors.

Precise machining of the cylinder bores is critical, and is the reason why rings should be fitted to the cylinder in which they are to be installed. A diameter variance from one cylinder to the next changes the end gap of the rings in that cylinder by a factor of pi (3.1416). For example, a cylinder .001" larger in diameter will increase the ring end gap by $.001 \times 3.1416 = .003$ ", rounding off. The second ring end gap should always be larger than the top ring end gap.

Ring Sets Containing Rail with a Tab

When installed in a horizontally opposed engine, oil rail gaps should be installed as shown at below (fig. 9). The tab rail must be installed below the oil ring expander with the tab facing toward the bottom of the ring groove extending into the split oil drain back holes (fig. 8). Use caution not to install the rail tab into the wrist pin oil hole.


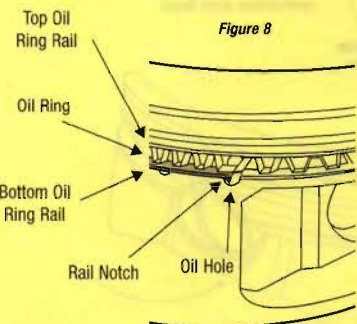


Figure 9
Example: Subaru

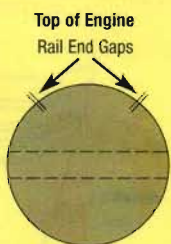

Oil Ring Support Rail Installation

1. Install oil ring support rails on the bottom of the oil ring groove with the antirotational locking detent facing downward.
2. Rotate the oil ring support rail until antirotational locking detent falls between the opening at intersection of ring groove and wrist pin hole. (fig. 10)
3. Install oil ring assembly as usual.

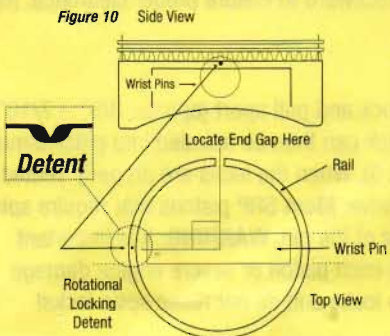


Figure 10
Ring Gap Orientation Diagram



NOT FOR SALE OR USE IN POLLUTION CONTROLLED VEHICLES.

JOB NO.: _____ DATE: _____
CUSTOMER NAME: ULT 2 / NO CAR PHONE: _____
ADDRESS: _____
CITY: _____ STATE: _____ ENGINE TYPE: NISSAN 3.0
CRANKSHAFT TYPE: _____ STROKE: _____
NOTES: _____

--SETUP--

LEFT RADIUS: 3.60	RIGHT RADIUS: 3.60
LEFT PLANE: +1.00	RIGHT PLANE: +.88
MAIN DIAMETER: 2.48	
DISTANCE BETWEEN BEARINGS: 13.75	
DRILL DIAMETER: 1.00	

--BALANCE RESULTS--

CYCLE NO.	LEFT PLANE		RIGHT PLANE	
START	ANGLE = 18.5	WEIGHT = - 68.3 gm.	ANGLE = 49.0	WEIGHT = - 57.1 gm
2	ANGLE = 18.5	WEIGHT = - 56.4 gm.	ANGLE = 49.0	WEIGHT = - 48.5 gm
3	ANGLE = 18.5	WEIGHT = - 46.3 gm.	ANGLE = 48.5	WEIGHT = - 42.3 gm
4	ANGLE = 19.0	WEIGHT = - 35.7 gm.	ANGLE = 48.5	WEIGHT = - 34.3 gm
5	ANGLE = 19.0	WEIGHT = - 20.6 gm.	ANGLE = 49.5	WEIGHT = - 23.6 gm
6	ANGLE = 18.5	WEIGHT = - 14.3 gm.	ANGLE = 49.5	WEIGHT = - 15.1 gm
7	ANGLE = 19.0	WEIGHT = - 10.6 gm.	ANGLE = 50.0	WEIGHT = - 12.3 gm
8	ANGLE = 21.0	WEIGHT = - .00 gm.	ANGLE = 51.0	WEIGHT = - .00 gm



SPECIALTY PRODUCTS, INC.

P.O. BOX 1079 • 8830 Aaron Lane • Southaven, MS 38671
(662) 796-7373 • FAX (662) 796-7374

“ESP” Forged Steel H-Beam Connecting Rod Installation Instructions

Thank you for selecting Eagle Specialty Products Connecting Rods! We strive to maintain the highest quality products and services. To ensure optimum service, please read the following instructions thoroughly. If you need any further assistance or have any questions, please contact our technical department at (662)796-7373.

General: Always disassemble and thoroughly clean all rod bolt surfaces. Do not use metal stamps to number rods, felt tip markers or tool makers dye are excellent alternatives.

Fasteners: Rod bolt threads and underside of head of the bolt should be lubricated with ARP Moly Assembly Lube. Do not use oil or Loctite. Cap should be seated on rod by aligning cap by hand and lightly tapping into place. Alternatively tighten bolts to avoid cocking cap.

Warning: If any other lubricant is used on bolt, bolt stretch method must be used due to different viscosity lubricants. Improper bolt torque will cause premature bolt failure.

Torque Specs:

Bolt	Identification	Torque	Bolt Stretch
7/16" ARP 8740	7/16" bolt head	63 ft. lbs.	.0059"-.0063"
7/16" ARP 2000	7/16" bolt head	75 ft. lbs.	.0064"-.0068"
7/16" ARP L-19	1/2" bolt head	79 ft. lbs.	.0073"-.0077"
3/8" ARP 2000	7/16" bolt head	43 ft. lbs.	.0055"-.0059"
5/16" ARP 2000	3/8" bolt head	28 ft. lbs.	.0048"-.0052"
5/16" ARP Custom Age 625	3/8" bolt head	32 ft. lbs.	.0062"-.0066"

To accurately determine the life of a bolt, it is recommended that a log of the bolts original free-standing (Untorqued) length should be kept and recorded upon subsequent teardowns for inspection. The free-standing length should be checked against it's original length. If there is an increase of .001" or more, or if there is any permanent deformation or galling, the bolt should be replaced.

Caution: Rod bolts are manufactured from high grade steel and are vulnerable to corrosion. Caution should be taken when handling fasteners to prevent exposing to moisture. Bolts should always be handled by the bolt head. Rod bolts should always be lubricated prior to handling or storage.

Clearances: Clearances listed are general guides and may vary according to the application.

Rod Bearings - .002" - .003"
 Piston Pin - .0009" - .0015"
 Side Clearance - .015" - .025"
 Block / Cam - Minimum .050"

Warranty: Eagle Specialty Products warrants that all of its products are free from defects in material and workmanship. This warranty is void on all products that show evidence of misapplication, improper installation, abuse, lack of proper maintenance or alteration from its original design. Warranty is limited to the cost of replacement of Eagle Specialty Products only, excluding labor and other related incurred cost. Eagle Specialty Products will not be responsible for incidental or consequential damages, property damage and personal injury damages to the extent permitted by law.

Connecting Rod Bolt Log

Rod #1	In	Out	Rod #2	In	Out	Rod #3	In	Out	Rod #4	In	Out
Rod #5	_____	_____	Rod #6	_____	_____	Rod #7	_____	_____	Rod #8	_____	_____

Rod #1	In	Out	Rod #2	In	Out	Rod #3	In	Out	Rod #4	In	Out
Rod #5	_____	_____	Rod #6	_____	_____	Rod #7	_____	_____	Rod #8	_____	_____

Rod #1	In	Out	Rod #2	In	Out	Rod #3	In	Out	Rod #4	In	Out
Rod #5	_____	_____	Rod #6	_____	_____	Rod #7	_____	_____	Rod #8	_____	_____

Rod #1	In	Out	Rod #2	In	Out	Rod #3	In	Out	Rod #4	In	Out
Rod #5	_____	_____	Rod #6	_____	_____	Rod #7	_____	_____	Rod #8	_____	_____

Rod #1	In	Out	Rod #2	In	Out	Rod #3	In	Out	Rod #4	In	Out
Rod #5	_____	_____	Rod #6	_____	_____	Rod #7	_____	_____	Rod #8	_____	_____